

# 688.087 RICE COOKER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	ZCE100-1001	COVER OPENING BUTTON	1
2	ZCE100-1002	KEY SEAT	1
3	ZCE100-1003	KEY PIN	1
4	ZCE100-1004	HANDLE COVER	1
5	ZCE100-1005	STEAM HOLE SEALING RING	2
6	ZCE100-1006	SCREW	2
7	ZCE100-1007	STEAM VALVE BRACKET	1
8	ZCE100-1008	BUTTON SPRING	1
9	ZCE100-1009	SCREW	1
10	ZCE100-10010	HANDLE SEAT	1
11	ZCE100-10011	STEEL COVER SUS409	1
12	ZCE100-10012	SCREW	10
13	ZCE100-10013	SCREW	4
14	ZCE100-10014	SCREW	3
15	ZCE100-10015	SCREW	1
16	ZCE100-10016	BACK COVER	1
17	ZCE100-10017	HINGE SHAFT	1
18	ZCE100-10018	REAR PRESSING PLATE	1
19	ZCE100-10019	RIGHT SPRING	1
20	ZCE100-10020	WATER COLLECTING BOX FRAME	1
21	ZCE100-10021	SCREW	1
22	ZCE100-10022	COLLECTING CUP	1
23	ZCE100-10023	SCREW	2
24	ZCE100-10024	LEFT SPRING	1
25	ZCE100-10025	SCREW SEALING	4
26	ZCE100-10026	ALUMINUM COVER	1
27	ZCE100-10027	SUPPORTING ROD	2
28	ZCE100-10028	SEALING RING	1
29	ZCE100-10029	SILICA GEL CUP	1
30	ZCE100-10030	ALUMINUM COVER SHAFT	1
31	ZCE100-10031	PLASTIC COVER RING BRACKET	4
32	ZCE100-10032	SCREW	1
33	ZCE100-10033	SILICA GEL GASKET	1

# 688.087 RICE COOKER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
34	ZCE100-10034	MICRO PRESSURE ALUMINUM COVER	1
35	ZCE100-10035	INNER POT	1
36	ZCE100-10036	FRONT LOCK PLATE	1
37	ZCE100-10037	SCREW	4
38	ZCE100-10038	INNER POT HANDLE FRAME	2
39	ZCE100-10039	INNER POT HANDLE	2
40	ZCE100-10040	PLASTIC RING	1
41	ZCE100-10041	SENSOR	1
42	ZCE100-10042	HEATING PLATE 220V 2500W	1
43	ZCE100-10043	SCREW	6
44	ZCE100-10044	MIDDLE LEVEL	1
45	ZCE100-10045	HOUSING FIXING PLATE	2
46	ZCE100-10046	SHELL SUS409	1
47	ZCE100-10047	PCB (DISPLAY BOARD)	1
48	ZCE100-10048	PLASTIC CONTROL SHELL	1
49	ZCE100-10049	SCREW	2
50	ZCE100-10050	TRADEMARKS PASTE	1
51	ZCE100-10051	SCREW	4
52	ZCE100-10052	SCREW	4
53	ZCE100-10053	POWER CORD 1.5M 3 x 1.5 MM <sup>2</sup>	1
54	ZCE100-10054	SCREW	2
55	ZCE100-10055	WIRE CLIP COVER	1
56	ZCE100-10056	PRESSING LINE BASE	1
57	ZCE100-10057	SCREW	1
58	ZCE100-10058	SCREW	1
59	ZCE100-10059	CERAMIC INDIVIDUAL WIRING SEAT	1
60	ZCE100-10060	SCREW	1
61	ZCE100-10061	CERAMIC MULTI LINE WIRING SEAT	1
62	ZCE100-10062	SCREW	3
63	ZCE100-10063	BOTTOM RING (BLACK)	1
64	ZCE100-10064	PCB BOARD FIXING BOX	1
65	ZCE100-10065	SCREW	2
66	ZCE100-10066	PCB BOARD (CONTROL PANEL)	1

# 688.087 RICE COOKER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
67	ZCE100-10067	SCREW	2
68	ZCE100-10068	DISPLAY PANEL MICA SHEET	1
69	ZCE100-10069	ALUMINUM FOIL 135 x 80 MM	1
70	ZCE100-10070	SCREW	1
71	ZCE100-10071	THE SUDDEN JUMP TEMPERATURE-CONTROLLER 15A 200 DEGREES	1
72	ZCE100-10072	WIRE INSULATION CASING	1
73	ZCE100-10073	UPPER COVER HEATING TUBE 30W	1
74	ZCE100-10074	MIDDLE HEATING TUBE 30W	1
75	ZCE100-10075	MIDDLE HEATING TUBE 60W	1
76	ZCE100-10076	MEASURING CUP	1
77	ZCE100-10077	RICE SPOON	1
78	ZCE100-10078	PAN FOOT BRACKET	5
79	ZCE100-10079	ELECTRIC RICE COOKER FEET	5
80	ZCE100-10080	SCREW	5
81	ZCE100-10081	SCREW	3
82	ZCE100-10082	FUZE ASSEMBLY	1
83	ZCE100-10083		1
84	ZCE100-10084		1
85	ZCE100-10085	SCREW	1
86	ZCE100-10086	SEAT COVER (BLACK)	1
87	ZCE100-10087	SCREW	4
88	ZCE100-10088	SCREW	2
89	ZCE100-10089	CONTROL PLATE MICA SHEET	1
90	ZCE100-10090	SCREW	5
91	ZCE100-10091	UPPER COVER THERMISTOR MODULE	1
92	ZCE100-10092	SCREW	1
93	ZCE100-10093	SCREW	2
94	ZCE100-10094	SCREW	1
95	ZCE100-10095	SCREW	2
96	ZCE100-10096	SCREW	1
97	ZCE100-10097	SCREW	1
98	ZCE100-10098	ALUMINUM FOIL 400 x 35 MM	1