


688.150 STEAMOVEN - ELECTRIC DRAWING

Telefoon (0317) 619 108

www.serviceteam.nl

SERVICE TEAM NEDERLAND

bedrijfskoeling grootkeukens witech catering equipment

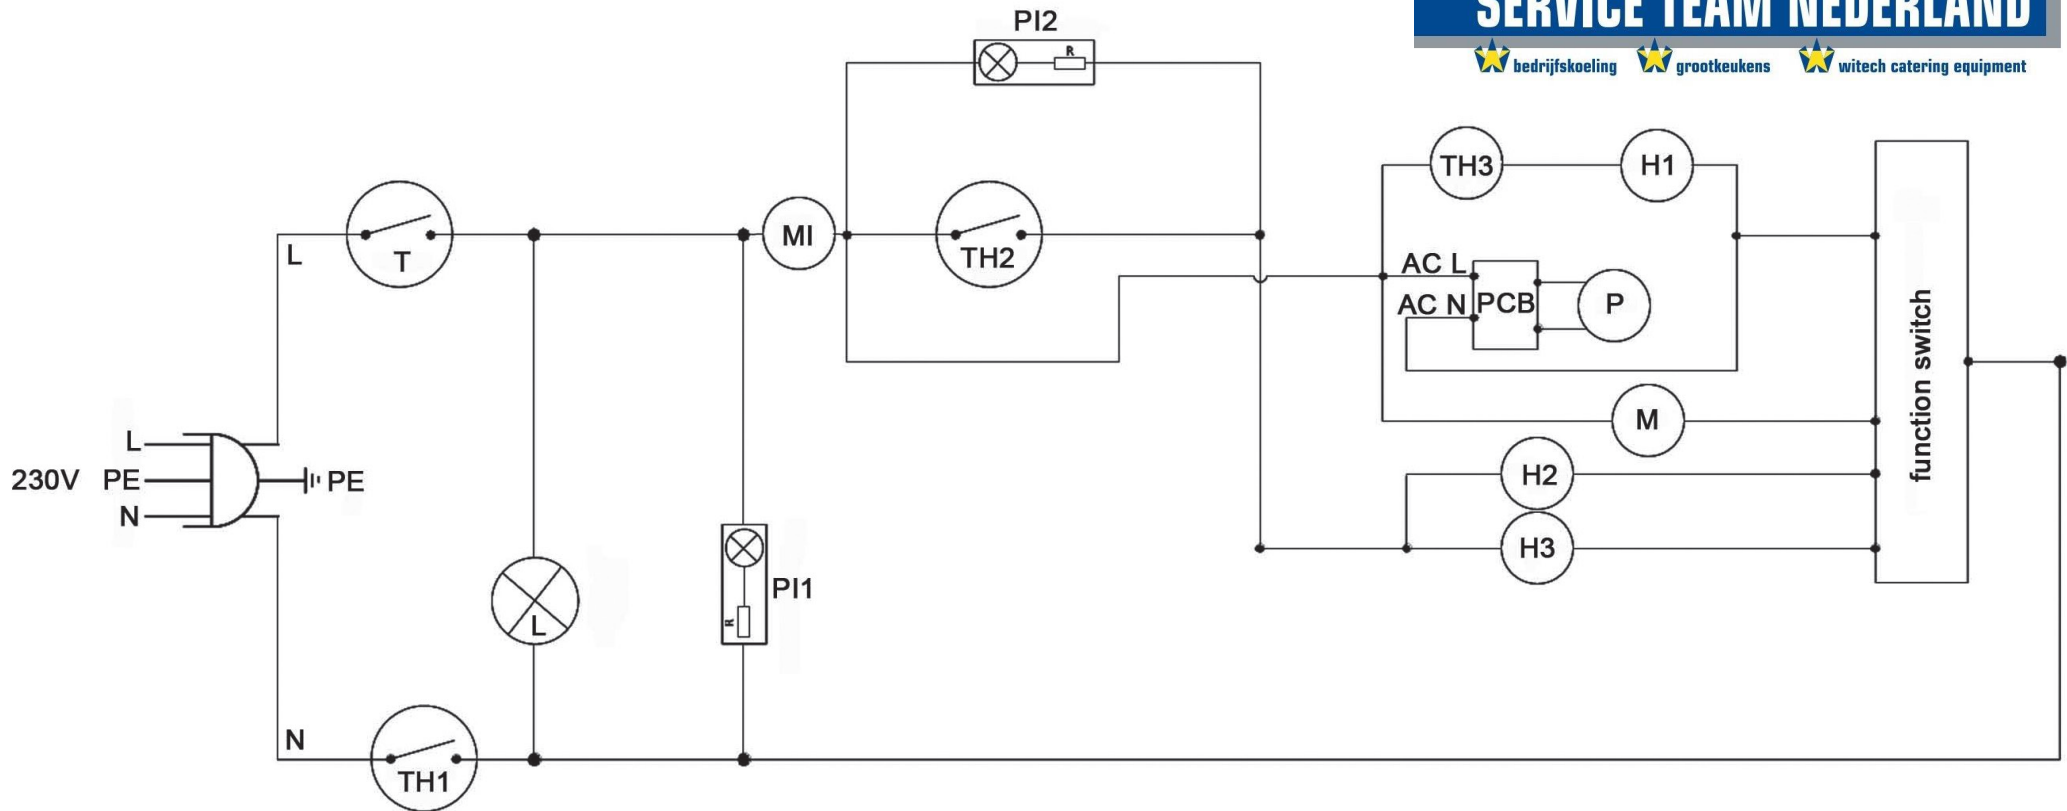

T - Timer
L - Lamp
TH1 - Thermostat 210° C
PI1 - power indicator light
PI2 - temp. indicator light
TH2 - Thermostat 200° C
TH3 - Thermostat 210° C

H1 - U-heater
MI - micro switch
P - pump
M - Motor
H2 - O-heater 1
H3 - O-heater 2

	pump	U-heater	O-heater 1	O-heater 2	Motor	Power
defrost	Off	Off	Off	Off	On	40W
convection	Off	Off	On	On	On	2040W
conv. steam	On	On	On	On	On	2555W
steam	On	On	Off	Off	Off	515W